

RT\Serp Cart-Edge

ASSEMBLY INSTRUCTION SHEET

Supply List

Before beginning cart assembly, ensure that all of the following components and fasteners are included in the package.

Parts:


- 1. Base Assembly (RT Cart-Edge or Serp Cart-Edge)
- 2. Main Handle
- 3. Side Handle (2)
- 4. (6) 3/8"-16 X 3/4" Socket Head Bolt


Tools Required:


1. 5/16" Hex Wrench (included)

Notes:

- These instructions are used for all versions of the RT Edge Cart & the Serp Edge Cart.
- All bolts should be kept tight for the cart to function properly and to avoid a potentially dangerous situation.

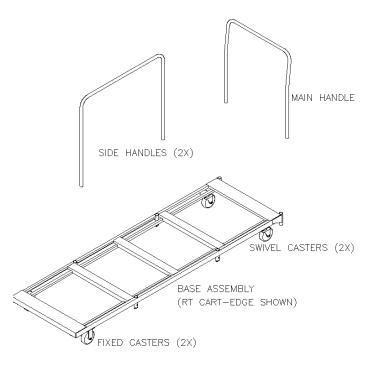

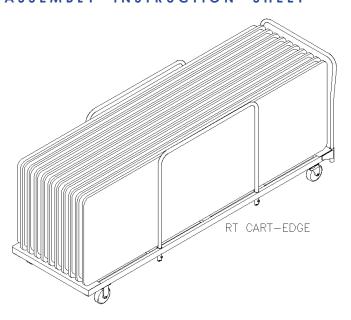

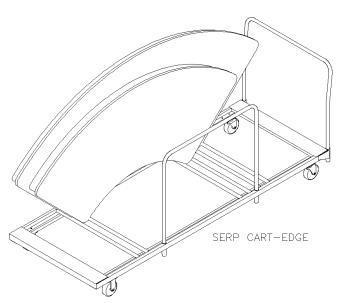

See other side for assembly information



RT\Serp Cart-Edge

ASSEMBLY INSTRUCTION SHEET

Assembly Instructions

Step:

- 1. Sit Base on wheels.
- Insert the Main Handle into the sockets on the end of the Base (See Figure 1). Make sure the handle tilts towards you (See Figure 2).
- 3. Start the 3/8" X 3/4" socket head bolts into the threaded nut on the sockets (if not already done -See Figure 4). Do not tighten yet.
- 4. Insert the Side Handles into the sockets on the sides of the Base (See Figure 3).
- 5. Secure the handles to the Base by using the wrench provided (See Figure 4).

